 



## 206 SERIAL 206-0001 THRU 206-0275


Figure 91A. Map Light Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	USABLE ON CODE
91A 1 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 9 -10 -11 -12	1270463-3-434 0713029 S1021Z6-6 NAS446-2-3 1470089-10-532 AN970-3 NAS679A3 S1876-1 1924 1470089-6 1470089-8 AN520-6-8 MS35489-4	MAP LIGHT INSTALLATION	1 2 2 1 2 1 1 1 1 1	A



Map Light (Cont)

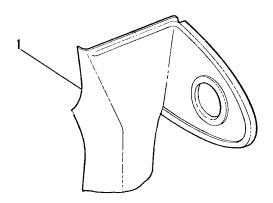

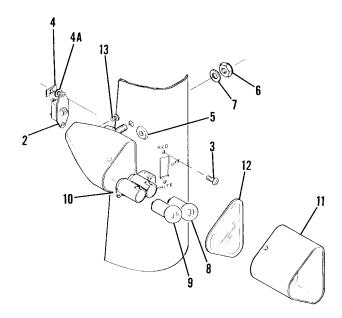

U206 SERIAL U206-0276 THRU U206-1234 P206 SERIAL P206-0001 THRU P206-0519

Figure 91B. Map Light Installation



		Vessma illustrated parts catalog Model 206,	U206	, P20
FIGURE AND INDEX NO.	T NUMBER	DESCRIPTION 1 2 3 4 5 6 7	UNITS PER ASSY	<del></del>
12006 07707 12006 C7707 C7707 12150 07707 12150 - 2 S1501 - 3 AN515 - 4 AN340 - 4A AN935	25-10	MAP LIGHT INSTALLATION SHIELD-FRONT DOORPOST LH SHIELD-FRONT DOORPOST LH SHIELD-FRONT DOORPOST RH SHIELD-FRONT DOORPOST LH SHIELD-FRONT DOORPOST RH SHELD-FRONT DOORPOST R	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	A B E J G J D F K H K